


APSLEADS Adjustable Adhesive Adaptor for SLE Furniture Mounts

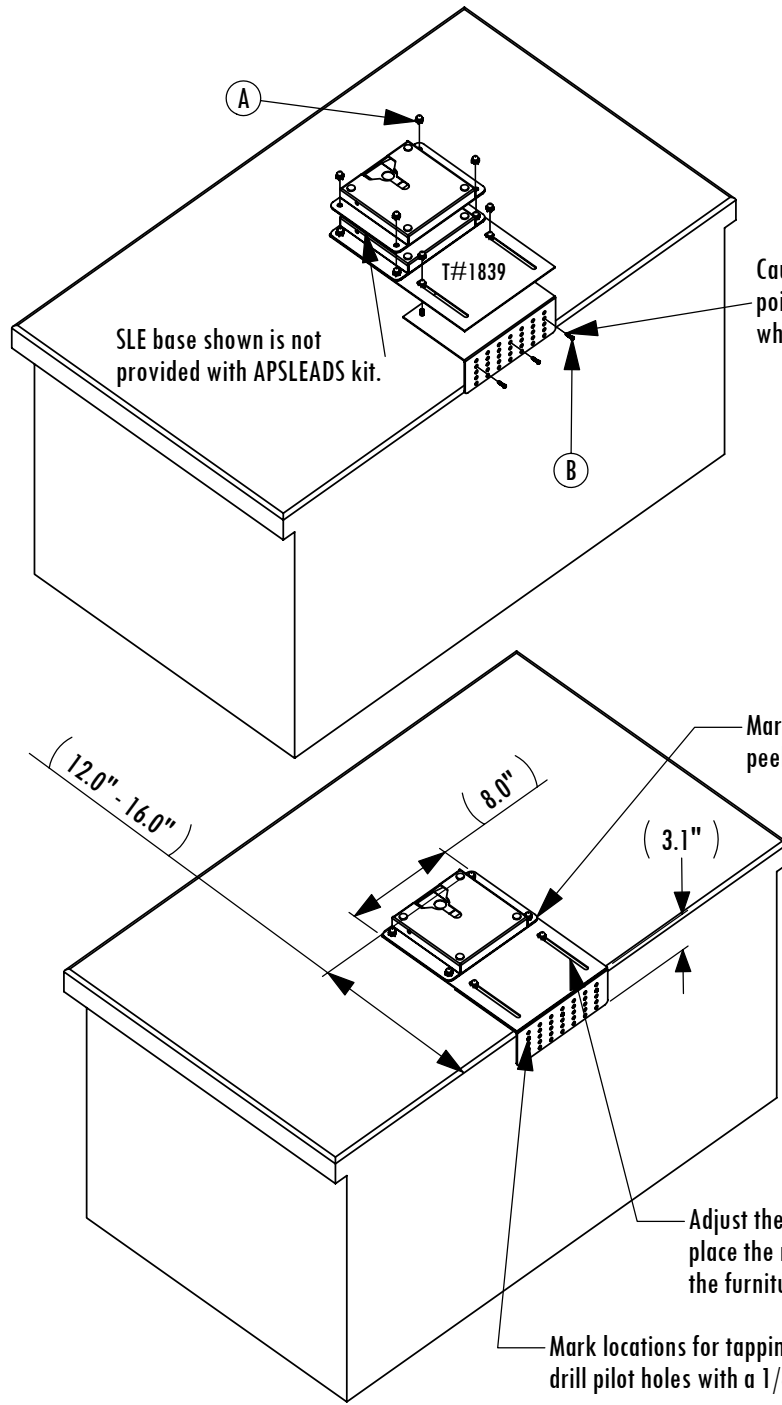

SLE base shown is not provided with APSLEADS kit.

Caution: Do not leave exposed screw points on the inside of the furniture where they might cause an injury.

Mark the location for adhesive before peeling the adhesive backing off.

Adjust the location of the adhesive plate to place the monitor in the proper location on the furniture. Slots provide 4" of adjustment.

Mark locations for tapping screws and drill pilot holes with a 1/8" bit 5/8" deep.

1. Determine the best permanent viewing location on the furniture for your monitor. Mark the location for the SLE base and APSLEADS.
2. Place the APSLEADS flush with the back of the furniture. (If the back of the furniture can not be placed flush against the plate, you may need to add shims or wood blocks.)
3. Attach the SLE Base to the APSLEADS with four of the acorn nuts (A).
4. After adjusting the studs and slots on the two APSLEADS plates, attach the plates together with two of the acorn nuts (A).
5. Mark the locations for the three screw holes on the back of the furniture.
6. Drill 1/8" pilot holes that are 5/8" deep in the marked locations for the tapping screws.
7. Use rubbing alcohol (C) to clean the furniture surface where the adhesive pad will be placed.
8. Peel the adhesive backing and carefully place where you previously marked. (Important! The adhesive can not be removed easily once placed.)
9. Apply pressure on the adhesive for ten seconds.
10. Attach the back plate to the furniture using the provided screws (B).

Hardware List

A) (6ea.) 1/4-20 Acorn Nuts

B) (3ea.) #10 x 5/8" HWH Screws

C) Alcohol Pad

Protected under one or more of these U.S. Patent numbers: 3,291,432; 3,559,942; 3,724,798; DES. 270,689; 4,613,109; 4,878,645; 4,852,842; DES. 309,5024,973,023; 5,169,114; 5,255,884; 5,310,132; 5,822,576; 5,021,014; Re. 35,677; DES. 398,834; 5,826,384; 5,941,492; 5,964,068; 6,060,661; 6,102,398; 6,138,704; 6,454,110B1; 6,761,270B2; 6,806,425B1.